

B1


INSTALLATION INSTRUCTIONS

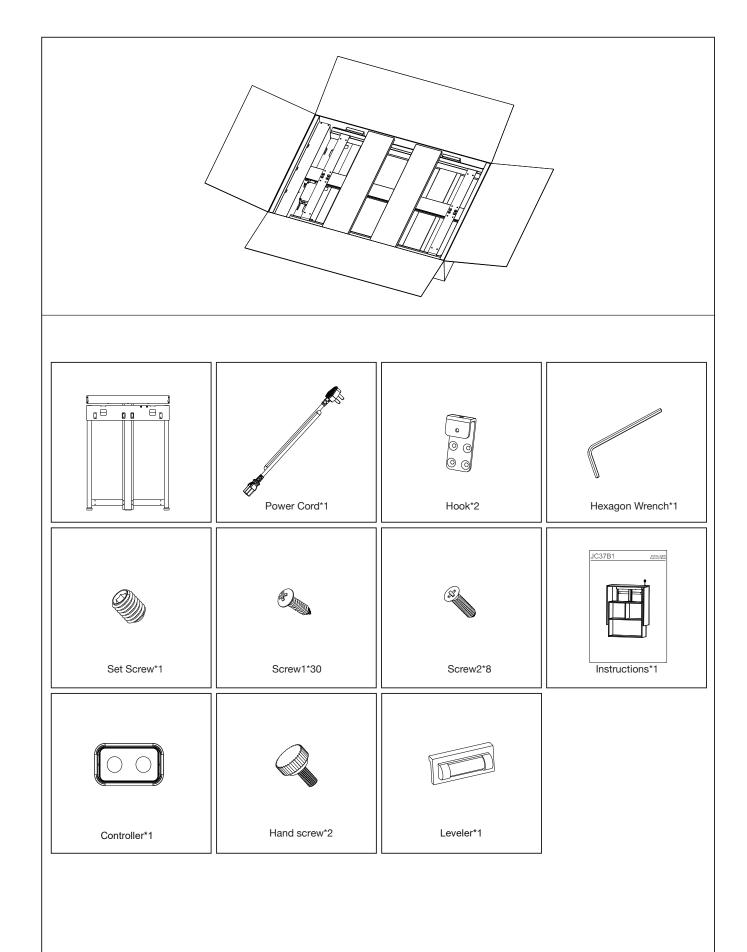

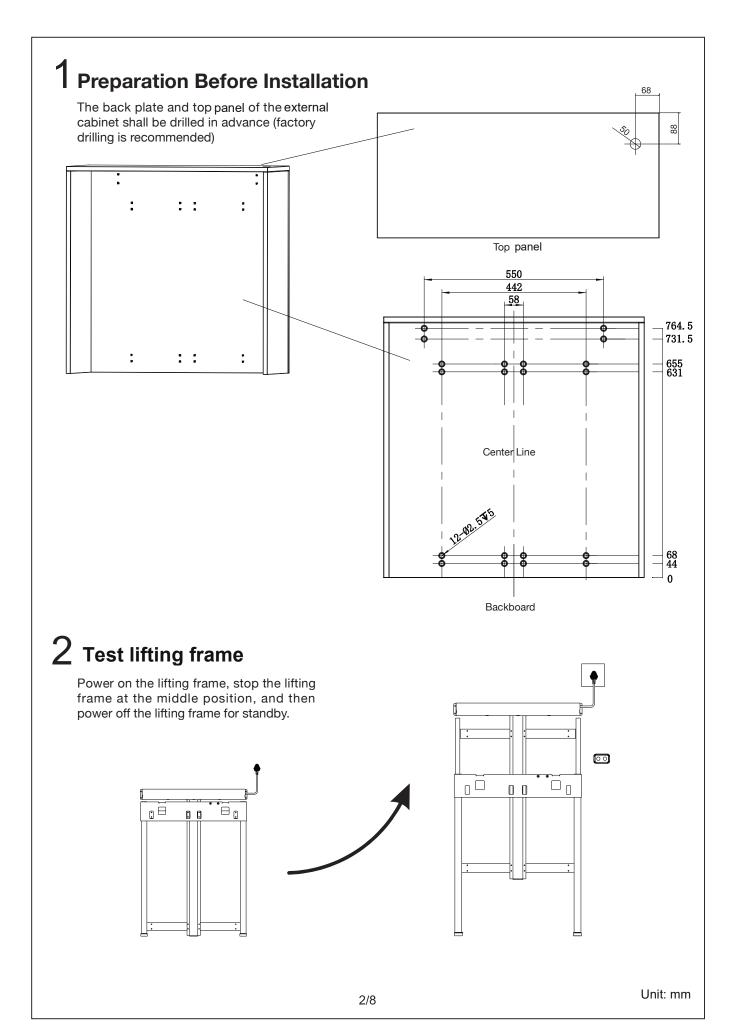




3 Install external cabinet against the wall

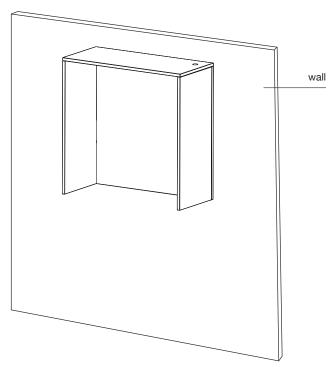


4 Align lifting frame holes against the external cabinet holes

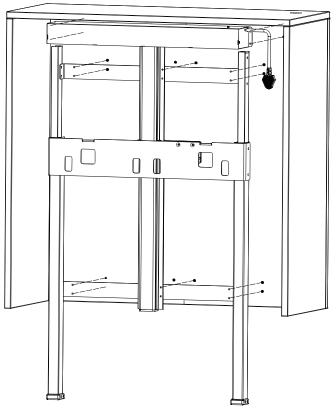


5 Calibrate and horizontally adjust lifting frame



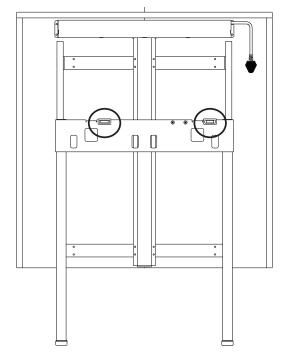


6 Install lifting frame onto external cabinet using screws

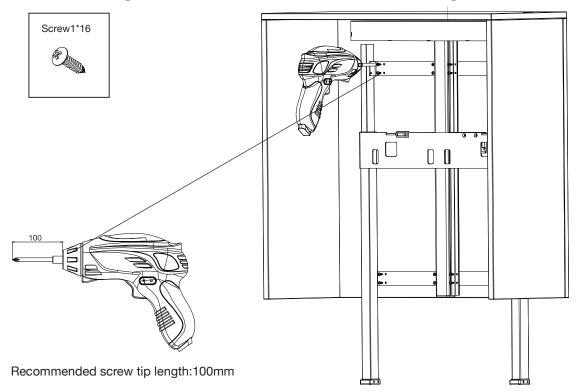

Unit: mm


7 Install power cord



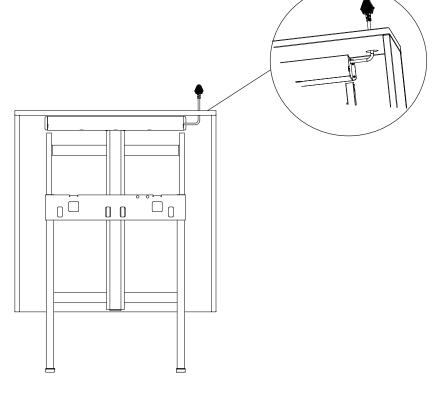


8 Drill holes on internal cabinet


Drill the internal cabinet back panel based on the diagram in advance (Factory drill is recommended)

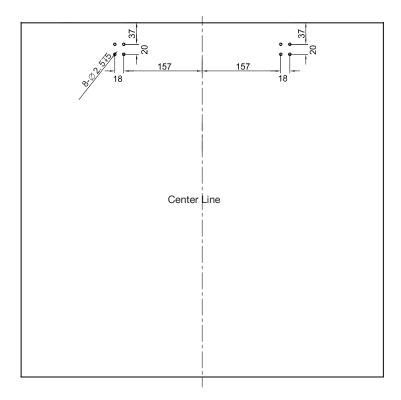

Unit: mm

 
9 Install Hooks




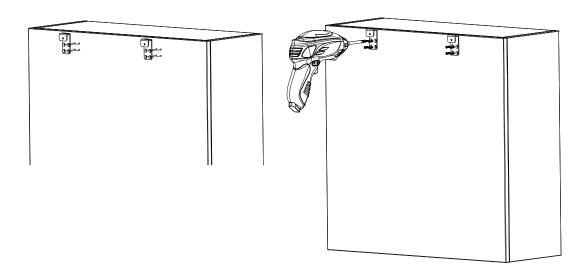

10 Install internal cabinet onto the lifting frame

Align the hook of the inner cabinet with the lifting frame, and hang the internal cabinet on the lifting frame

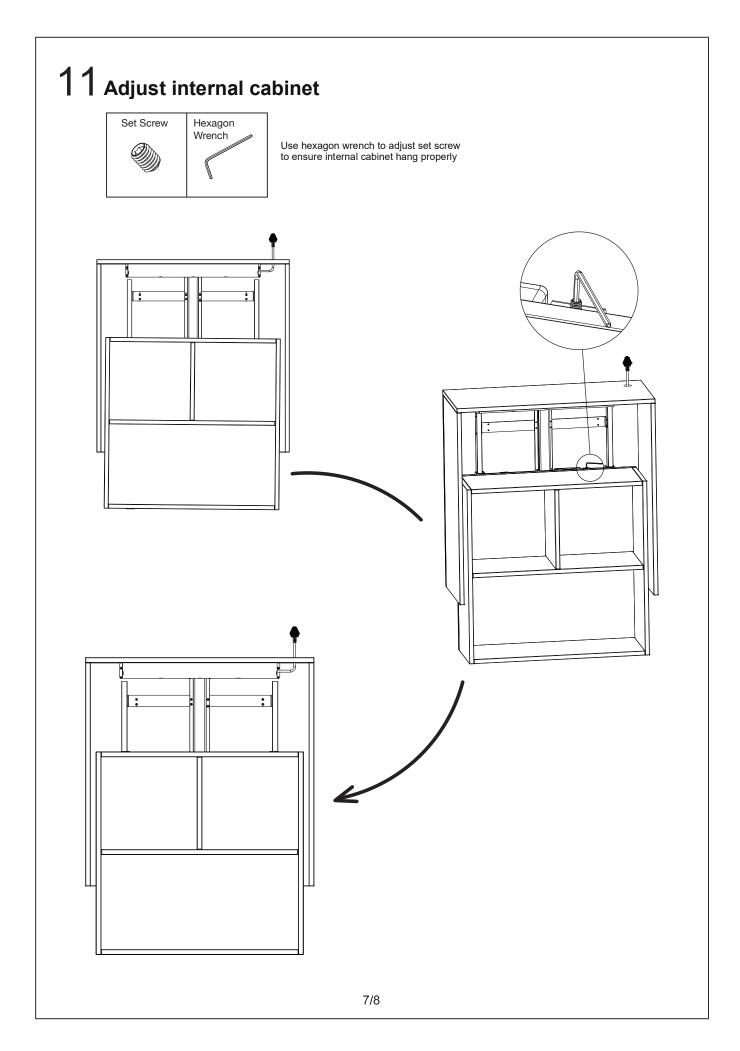

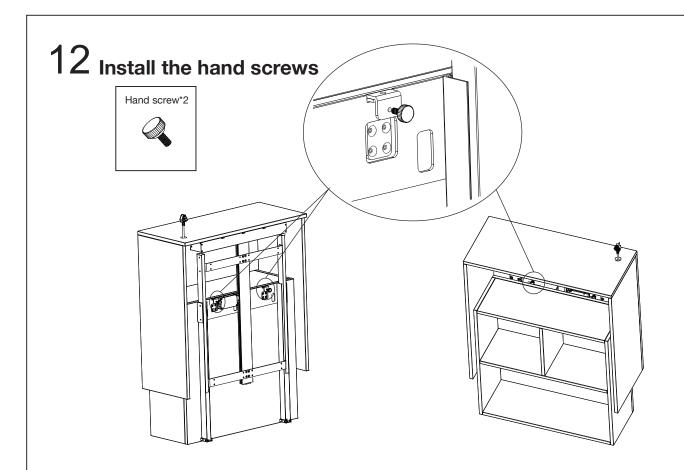

13 Install the remote controller

